# Thermocouple Data Logger with LCD and USB Interface

#### **ORDERING INFORMATION**

Standard Data Logger EL-USB-TC-LCD (Data Logger, Measurement

Replacement Battery BAT 3V6 I/2AA

Leads, Software on CD and Battery)

K-type Probe K-TYPE PROBE

### **FEATURES**

- -200 to +1350°C (-328 to +2462°F) K-type measurement range
- -200 to +1190°C (-328 to +2174°F) J-type measurement range
- -200 to +390°C (-328 to +734°F) T-type measurement range
- High contrast LCD, with four digit temperature display
- USB Interface for set-up and data download
- User-programmable alarm thresholds
- Status indication via red and green LEDs
- · Immediate, delayed and push-to-start logging
- Supplied with basic K-type thermocouple rated from 0 to 400°C (32 to 752°F)
- Supplied complete with replaceable internal lithium battery and Windows control software



This standalone data logger measures and stores up to 32,510 temperature readings from either a K, J or T type thermocouple.

A thermocouple is attached via the thermocouple socket at the base of the unit. The user can easily set up the logging rate and start-time, and download the stored data by plugging the data logger into a PC's USB port and running the purpose designed software under Windows 2000, XP, Vista or 7. Data can then be graphed, printed and exported to other applications.

The high contrast LCD can show several different temperature variables. The user can cycle between these using the push button. The data logger is supplied complete with a long-life lithium battery, which can typically allow logging for up to 6 months.

Specifications	Minimum	ТурісаІ	Maximum	Unit
Probe Measurement range (K-type)	-200 (-328)		+1350 (+2462)	°C (°F)
Probe Measurement range (J-type)	-200 (-328)		+1190 (+2174)	°C (°F)
Probe Measurement range (T-type)	-200 (-328)		+390 (+734)	°C (°F)
Operating temperature range *	-10 (+14)		+40 (+104)	°C (°F)
Resolution (internal and displayed)		0.5 (1)		°C (°F)
Accuracy (logger error)		±1 (±2)**		°C (°F)
Logging rate	every I s		every I2 hr	-
I/2AA 3.6V Lithium Battery Life		6***		Month

<sup>\*</sup> Operating temperature applies to the data logger module only. Please consult the probe manufacturer for operating temperature of thermocouple.



<sup>\*\*</sup> Quoted accuracy is for the data logger only and excludes the thermocouple probe. Thermocouple error should also be taken into consideration.

<sup>\*\*\*</sup> Depending on sample rate, ambient temperature and use of LCD.

# Thermocouple Data Logger with LCD and USB Interface


### WINDOWS CONTROL SOFTWARE

Lascar's EasyLog USB control software is supplied free of charge with each data logger. Easy to install and use, the control software runs under Windows 2000, XP,Vista or 7. The software is used to set-up the data logger as well as download, graph and export data to Excel.

The software allows the following parameters to be configured:

- · Logger name
- °C, °F
- Logging rate (1s, 10s, 1m, 5m, 30m, 1hr, 6hr, 12hr)
- · High and low alarms
- · Immediate, delayed and push-to-start logging
- Display off, on for 30 seconds after button press, or permanently on
- Data rollover (Allows unlimited logging periods by overwriting the oldest data when the memory is full)







### YOUR THERMOCOUPLE

The probe supplied with your data logger is a K-type thermocouple designed to measure temperatures from 0 to 400°C (32 to 752°F).

The data logger is designed to work with J, K and T-type thermocouples fitted with a standard mini thermocouple connector; this makes your data logger compatible with a wide range of available thermocouples. Your application will determine which probe is most suitable based on temperature range, accuracy, form and price. For information on a wide variety of alternative thermocouples, please

Туре	Temperature Range °C	Temperature Range °F	Connecto ANSI	r Coding IEC
K	-200 to +1350	-328 to + 2462		
J	-200 to +1190	-328 to + 2174		
Т	-200 to +390	-328 to +734		






## Thermocouple Data Logger with LCD and USB Interface

## **DISPLAY AND STATUS FUNCTIONS**

The Data Logger features a high contrast LCD and two LEDs. The LCD shows logged temperature values using seven segment numbers, along with symbols. The LCD can also show information regarding the logging status.

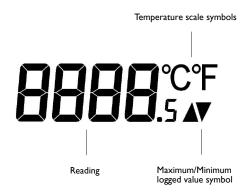

Three different functions are available on the display – most recent logged temperature, maximum logged temperature and minimum logged temperature. The push button is used to cycle through the functions. In addition, logging and alarm status are shown using two high intensity LEDs.

### LCD INDICATION

Display	Logger Status	Explanation
d5	Delayed Start	This is shown when the logger is set to start at a specific data and time*
P5	Push to Start	This is shown when the logger is setup for "Push to start" logging
109	Logging	This is shown when the logger is running in "LCD off" mode, and the button is pressed. The display clears again after three seconds
	Stopped	If the logger has not been set to log and the button is pressed, three dashes are displayed for three seconds

<sup>\*</sup> If the logger is set to "LCD off" or "LCD on for 30 seconds" mode, then this will only be shown after the button is pressed. Otherwise the display will remain blank.



## Thermocouple Data Logger with LCD and USB Interface

### LED FLASHING MODES

The Data Logger features two LEDs that indicate the logging, battery and alarm status:

- The first LED flashes red (R) to indicate that the Data Logger is in an alarm condition. It will flash when the logged temperature has exceeded a Low or High alarm level.
- The second LED flashes green (G) to indicate that the Data Logger is not in an alarm condition.

Hold is enabled by default, which forces the logger to continue flashing the red LED after an alarm, even when the temperature has returned to normal. This feature ensures that the user is notified that an alarm level has been exceeded, without the need to download the data from the logger.

Hold can be turned off via the control software. The red LED will then only flash whilst the logger is in an alarm condition. When the temperature returns to normal, the green LED will flash.

Additional LED modes are explained below:





## Thermocouple Data Logger with LCD and USB Interface

## **DIMENSIONS**

All dimensions in mm (inches)





### **BATTERY REPLACEMENT**

We recommend that you replace the battery every 6 months, or prior to logging critical data.

The data logger does not lose its stored readings when the battery is discharged or when the battery is replaced; however, the data logging process will be stopped and cannot be re-started until the battery has been replaced and the logged data has been downloaded to a PC.

Check with your supplier that the battery you are ordering is 'press fit' and is not fitted with solder tags. Before replacing the battery, remove the data logger from the PC.

#### Note

Leaving the data logger plugged into the USB port for longer than necessary will cause some of the battery capacity to be lost.

## WARNING

Handle lithium batteries carefully, observe warnings on battery casing. Dispose of in accordance with local regulations.

